


WALL MOUNT INSTALLATION

DWA1230

Copyright 2017 Technicolor. All rights reserved. All trademarks referenced are service marks, trademarks, or registered trademarks of their respective companies. Specifications subject to change without notice. DMS5-01G-25-478 v1.0.

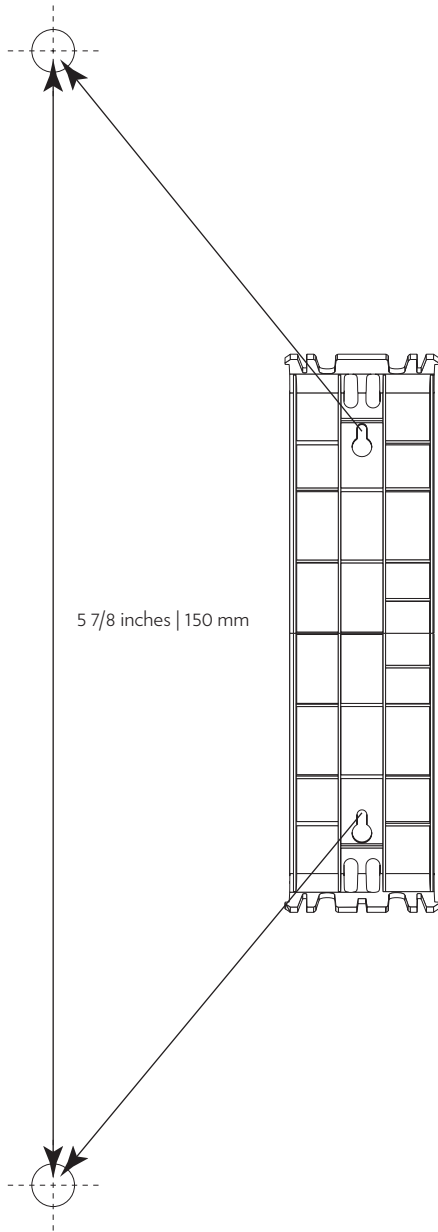


Fixing the wall-mount bracket to the wall

- 1 You need two screws (not included) and corresponding wall plugs (not included). Make sure to use screws and plugs fit for wall material and of adequate strength and length.
- 2 Place this template (scale 1:1) on the wall in the vertical position the DWA1230 will be mounted to the bracket.
- 3 Mark the mounting holes. The distance between the drilled holes must be exactly 5 7/8 inches (150 mm) as indicated on the template.
- 4 Drill the marked holes with a 1/4 inch (6 mm) diameter drill bit.
- 5 Insert the wall plugs in the drilled holes.
- 6 Insert the screws in the wall plugs and leave the screw extended for about 1/5 inch (5 mm) from the wall.
- 7 You can now hang the wall-mount bracket on the screws.

Fixing the DWA1230 to the wall-mounted bracket

- 1 Position the DWA1230 so that the hinges of the bracket align with the corresponding holes in the DWA1230 side panel. Make sure not to position the DWA1230 up-side-down.

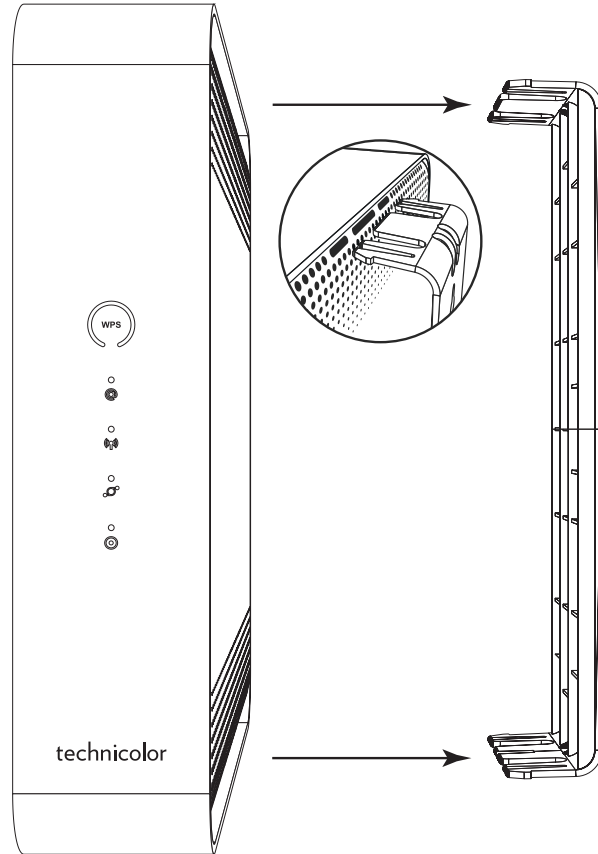

- 2 Gently push the DWA1230 until it locks into the bracket.
- 3 Your DWA1230 is now secured to the wall-mount bracket.



DSL37756470