


WALL MOUNT INSTALLATION

E31T2V1 (CVA4001CHR) / ET2251 (CVA4003CHR)

Template

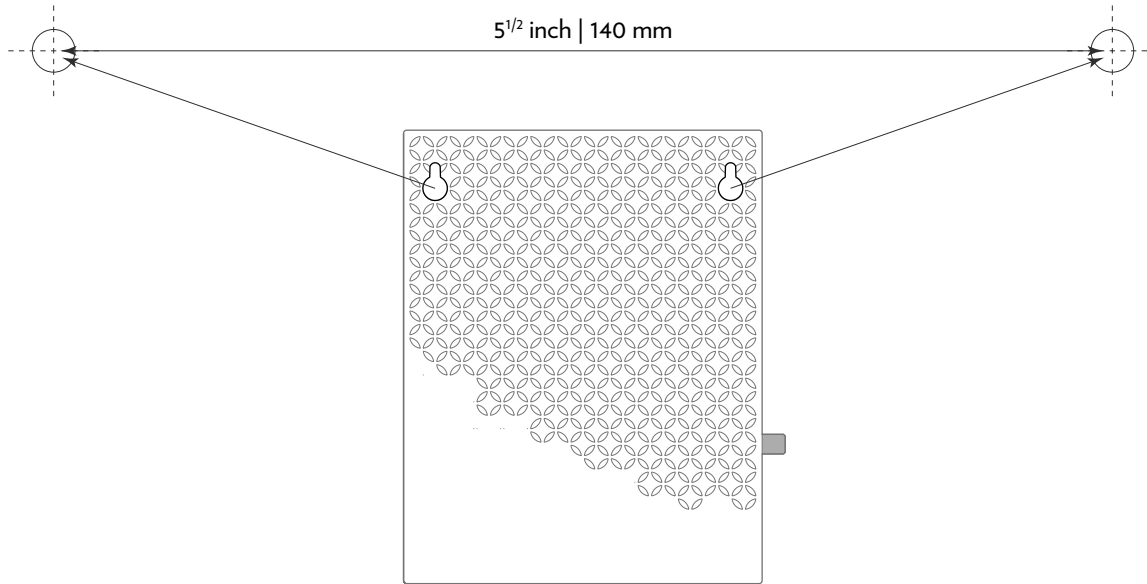

Instructions

- 1 Take the screws and wall plugs out of your box.
- 2 Place the template on the wall in the position the unit will be mounted.
- 3 Mark the mounting holes. The distance between the drilled holes must be exactly 5 1/2 inches (140 mm) as indicated on the template.
- 4 Drill the marked holes with a 1/4 inches (6 mm) diameter drill bit.
- 5 Insert the wall plugs in the drilled holes.
- 6 Insert the screws in the wall plugs and leave the screw extended about 0.2 inches (5 mm) from the wall.
- 7 Hang the unit on the screws.



3780893A